

 


KINYO

User's Guide


2.1 SPEAKER SYSTEM

SA-680

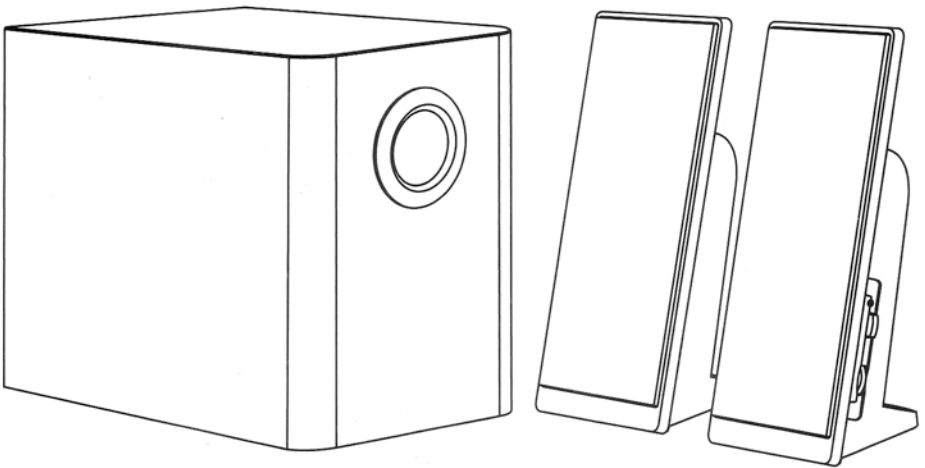

Please read and comply with all safety instructions before use.


Location of controls

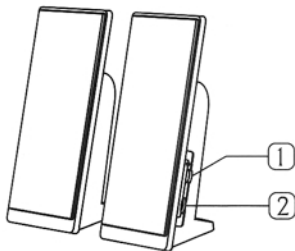

CONTROLS: (REFER TO ABOVE NUMBER)

1	Power on/off Button
2	Volume Control

System connection

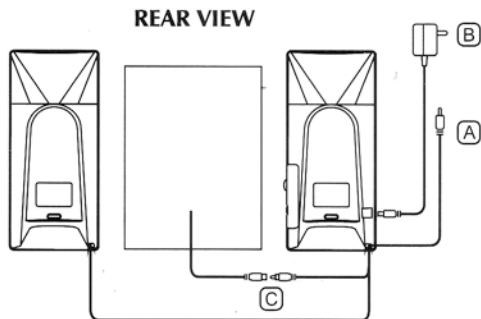

A. Stereo In: Connect to audio signal source. i.e. personal computer, musical keyboard, portable CD player, etc.

B. Power Cable: Connect adapter to the right speaker.

C. To Woofer: Connect cable from right speaker to the cable at the rear of the subwoofer.

Setting Up the Speakers

1. Make sure the system's power is off before start setting up.
2. Place the speakers on each side of the monitor for the best audio performance.

Controls

1. Push the power button to turn the system on and off. The LED indicator will light up when power is on.
2. Turn the volume control dial to set the volume level of the system. Turn clockwise to increase volume level and counterclockwise to reduce volume level.
3. Always turn the power off when not using the unit.

NOTE

If audio distortion occurs, adjust the soundcard audio output level to the minimum by double click on the small speaker icon in the lower right corner of the screen if you are running Windows 95 or 98. Make adjustment in the soundcard mixer program. Then increase the volume level of the speaker system to its maximum by turning the volume control on top of the subwoofer clockwise all the way. Once the speaker system volume is set to maximum, adjust your soundcard mixer program to a comfortable listening level. Save and close the soundcard mixer program.



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER OR BACK
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL

the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.