


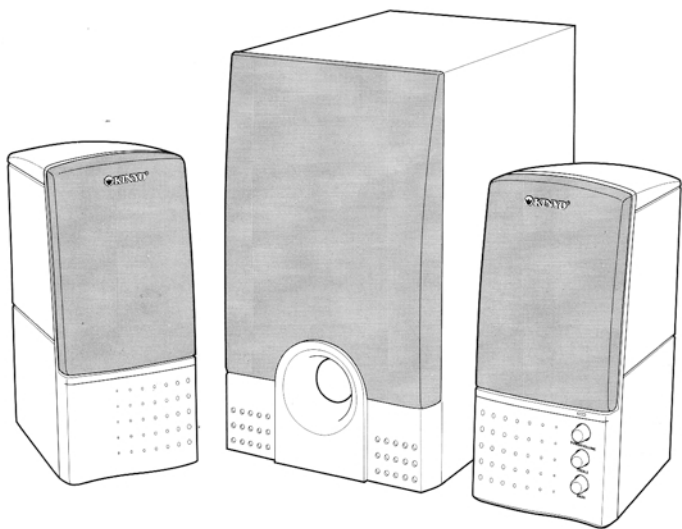


Multimedia Speaker **User's Guide**

MODEL NO. SW-4315



Please read and understand all safety instructions before use.

Connecting Your Multimedia Speaker

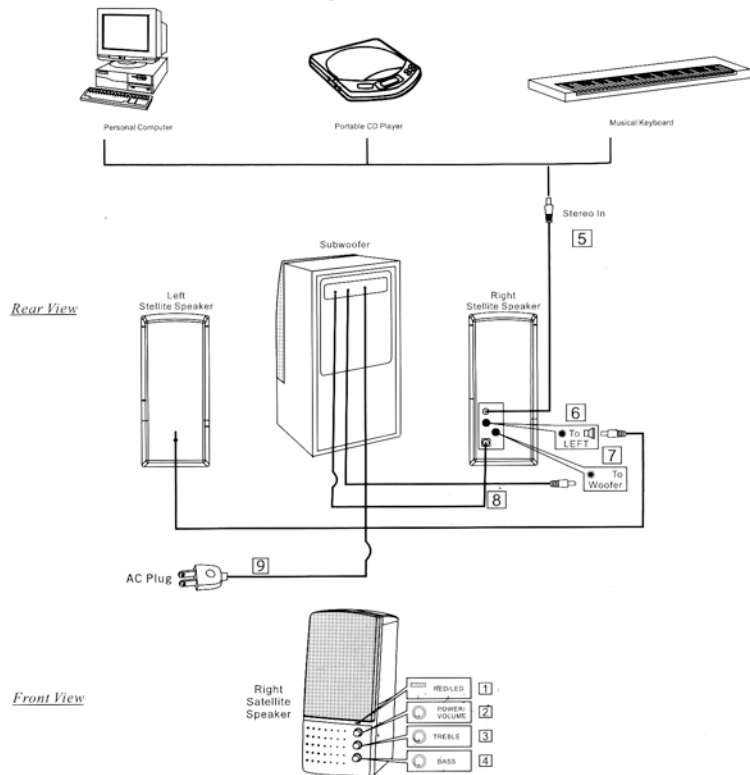

Controls:(refer numbersto diagram)

- 1 Red/LED: Indicates Power ON/OFF
- 2 Power On/Off & Volume Control: Advancing this control to turn power on/off and set volume level. Turn clockwise to turn power on and increase volume, counterclockwise to reduce volume and turn power off.
- 3 Treble Control: Adjust this control to set treble level. Turn clockwise to increase treble, and counterclockwise to reduce treble.
- 4 Bass Control: Adjust this control to set bass level. Turn clockwise to increase bass, and counterclockwise to reduce bass.

Connections:

- 5 Audio Input Cable: Connect this 3.5mm stereo mini plug cable to a source of sound or music. i.e. Personal Computer, Portable CD Player, Musical Keyboard, etc.
Note: If you're using a computer sound card as a signal source, use the "Line" level output, instead of "Speaker" level output.
- 6 Left Speaker Signal Jack: Connect the cable from left speaker to the "TOLEFT" jack on the right satellite speaker.
- 7 Woofer Signal Jack: Connect the cable from woofer to the "TO WOOFER" jack on the right satellite speaker.
- 8 Power Output Cable: Connect this cable to right satellite speaker
- 9 Power In Cable: Connect the cable to wall outlet.

Warning: Do not connect the power cable to the wall outlet until all connections are completed.

SYMBOL EXPLANATION



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION

PILOT LAMP SOLDERED IN PLACE TO REDUCE THE RISK OF ELECTRIC SHOCK, REFER TO QUALIFIED SERVICE PERSONNEL



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated, "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert to user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Important Safety Instructions:

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating instructions should be followed.
5. Water & Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swing pool, and that alike.
6. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings; or placed in a built-in, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
8. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
9. Grounding or Polarization - Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
10. The power supply cords should be routed so that they are not likely to be walked on or pinched by items place upon or against them. Do not overload wall outlet and extension cords as this can result in risk of fire or electrical shock.
11. When cleaning the unit, unplug the unit from the power outlet before cleaning. Use a dampened cloth to clean the surface of the unit. Do not use liquid cleaners or alcohol cleaner. Never insert object of any kind into the unit through its openings as they may touch dangerous voltage points or short out parts that could result in fire or electrical shock.
12. Power Lines - An outdoor antenna should be located away from the power lines.
13. None Use Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
14. Object and liquid Entry - Care should be taken so that the objects do not fall and liquids are not spilled into the enclosure through openings.
15. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance ; or
 - E. The appliance has been dropped, or the enclosure damaged.
16. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.